



Bi-Folding Door Installation Guide

	Section A	
	Door Installation	A1 - A7
	Section B Lock Adjustment	B1
KF	Section C Kit-Form Pre-Assembly	C1 - C2
	Section D De-Glazing Instruction	D1



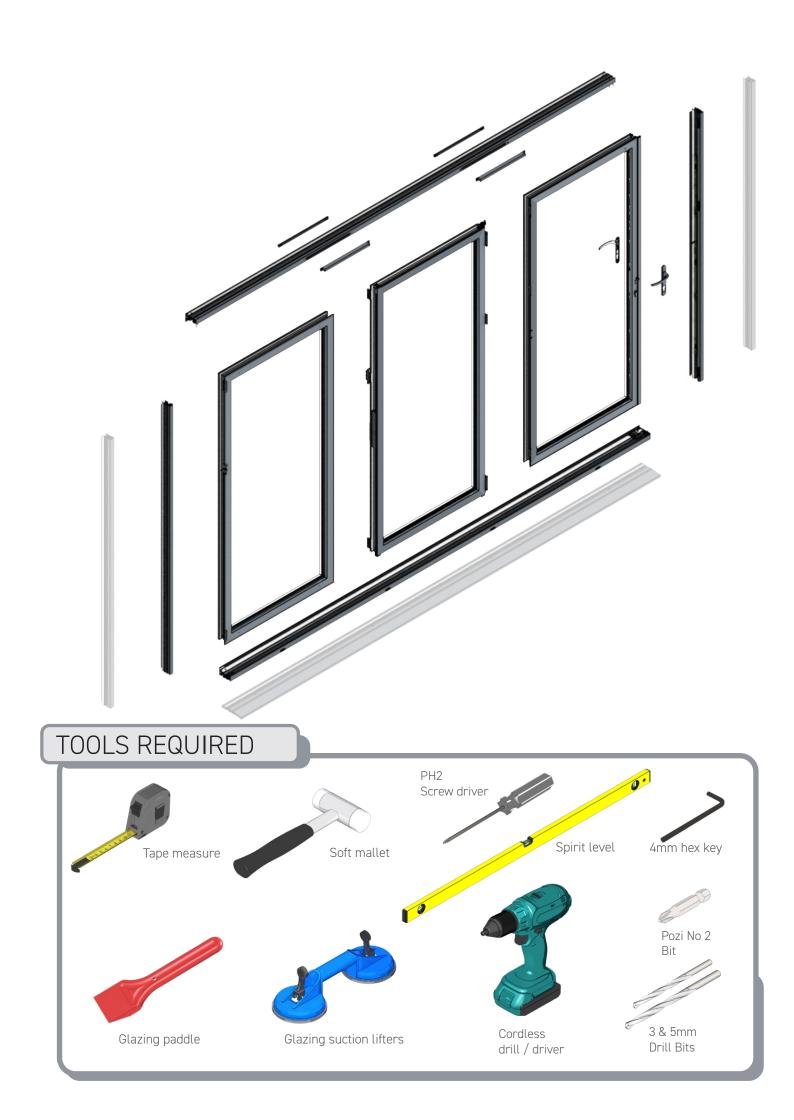

PACKAGING CONTENTS

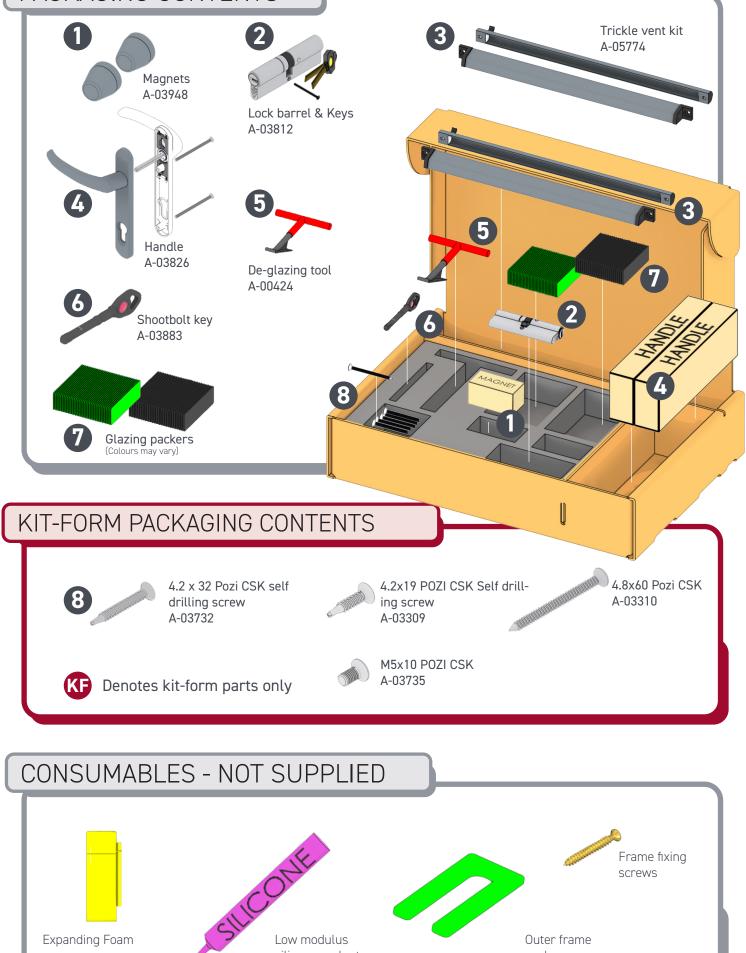


Expanding Foam

Low modulus silicone sealant


Outer frame packers

BEAD UNPACKING




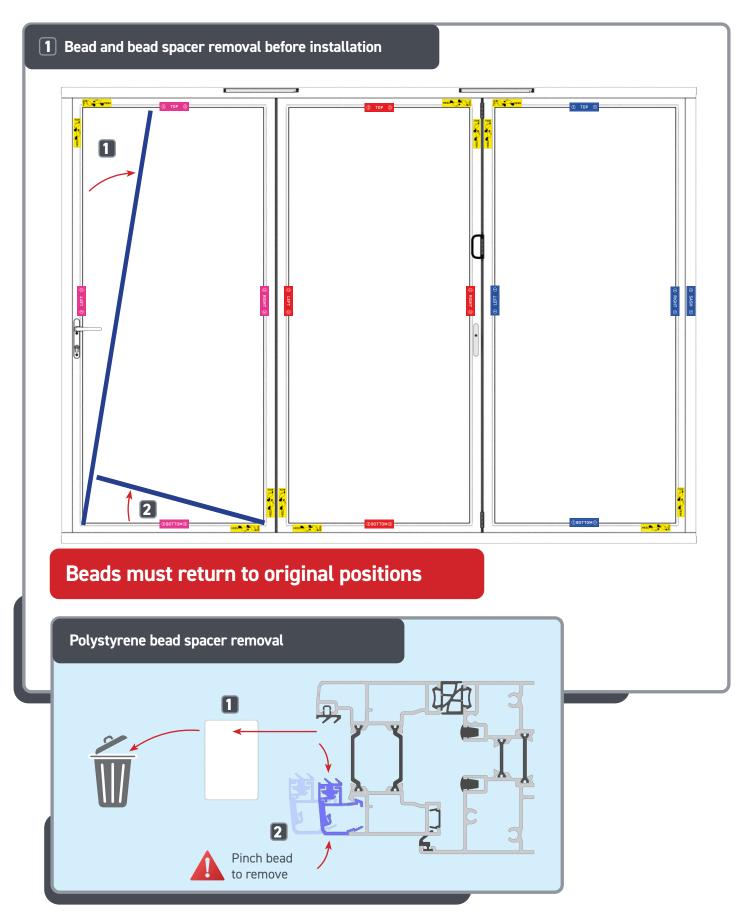


GENERAL ASSEMBLY

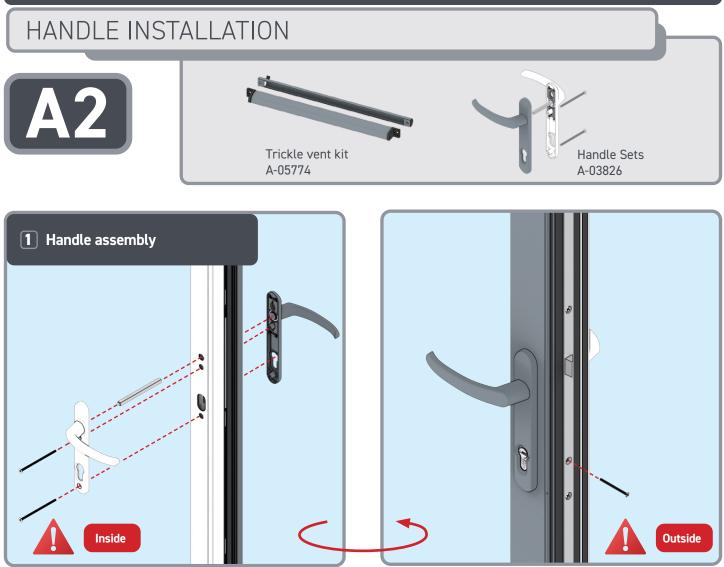


OPTIONAL TRICKLE VENT INSTALLATION

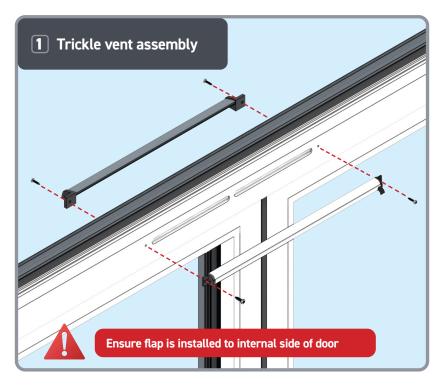



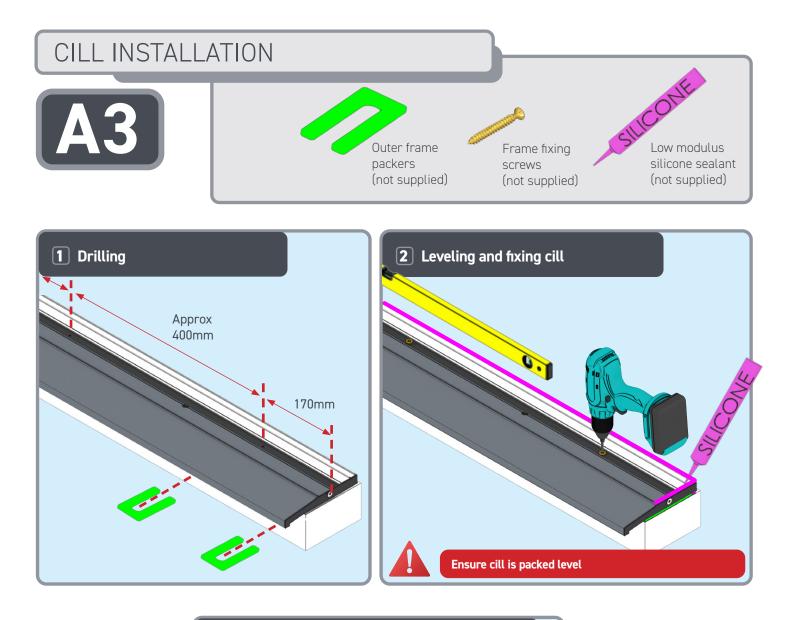

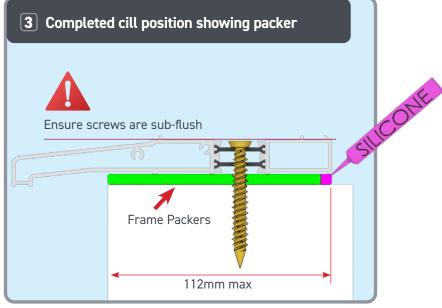

Note - Cill packers and screws are not supplied





Ensure cill is level: ±1mm

DOOR POSITIONING





Use screwdriver not drill

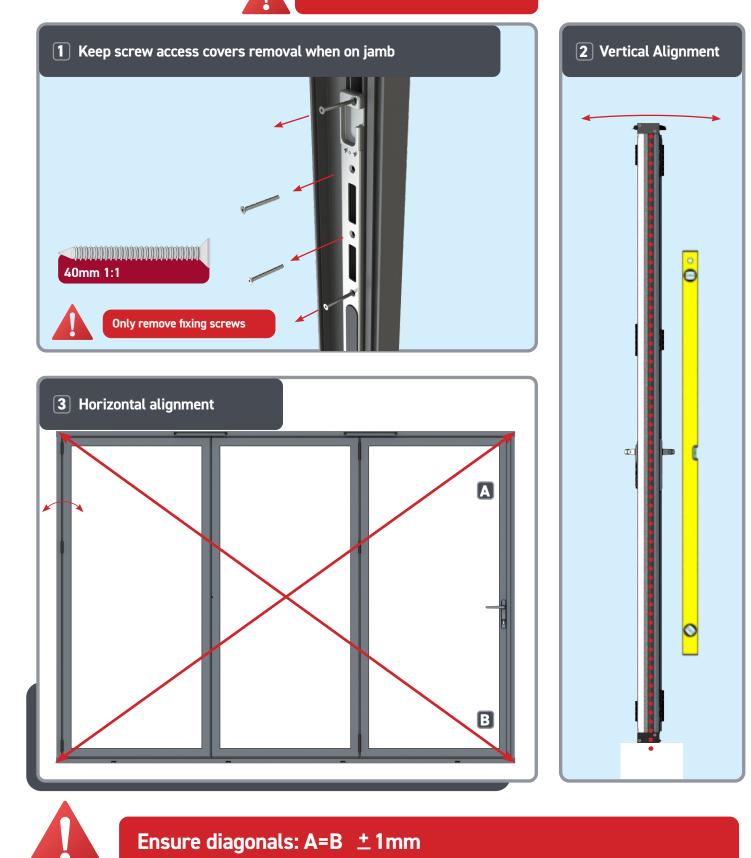

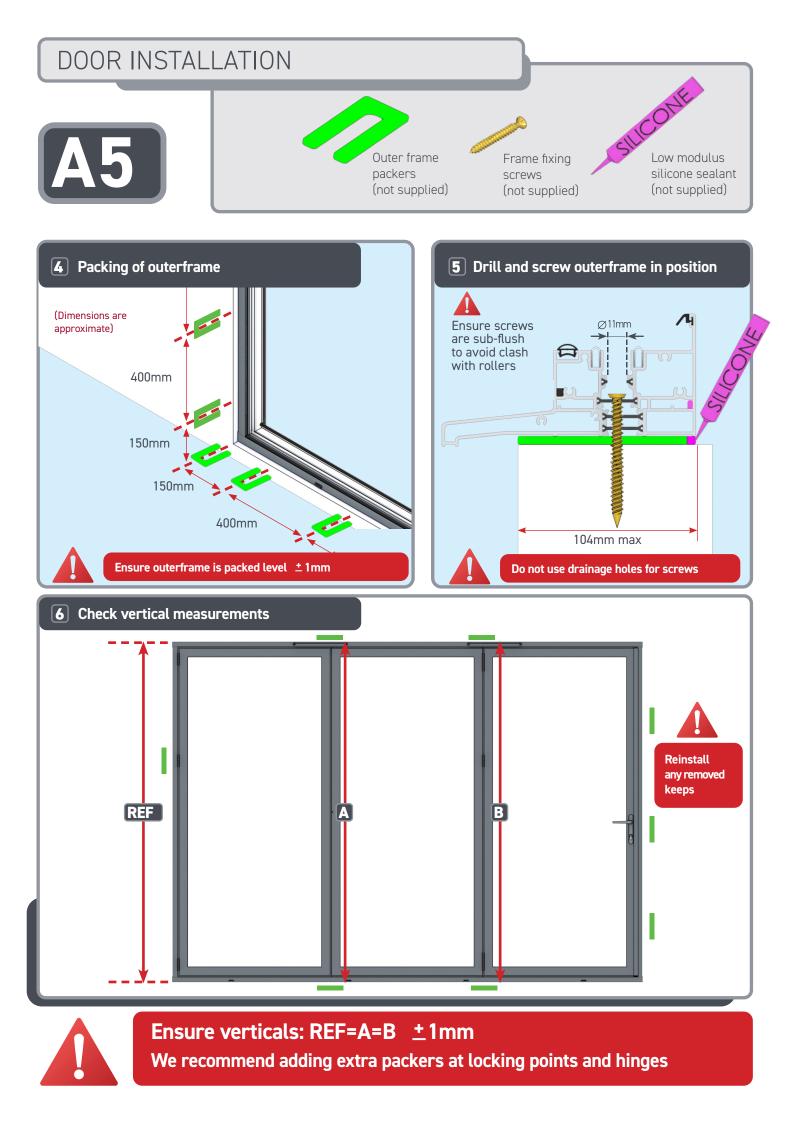



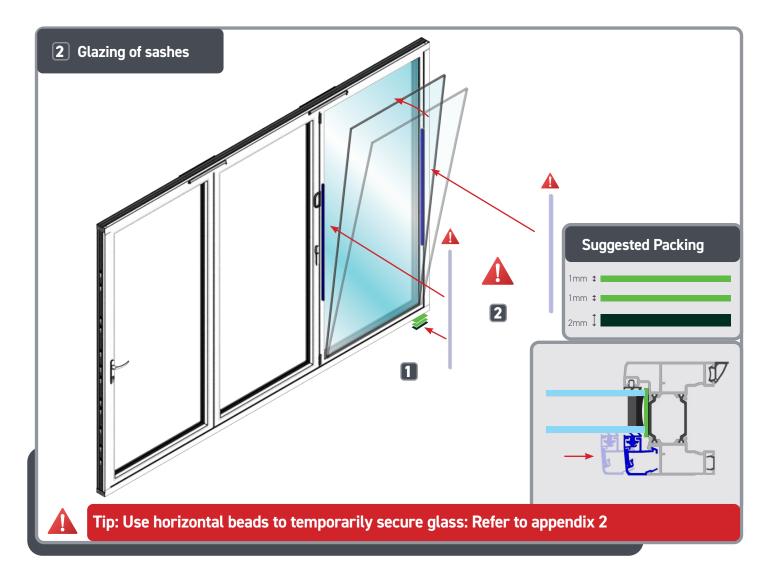


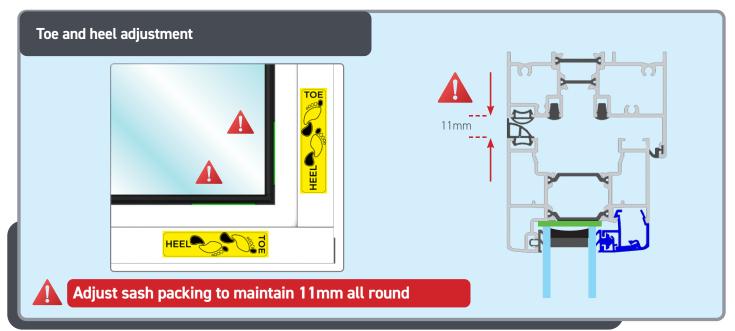



ADDITIONAL PACKING AND REFITTING BEADS



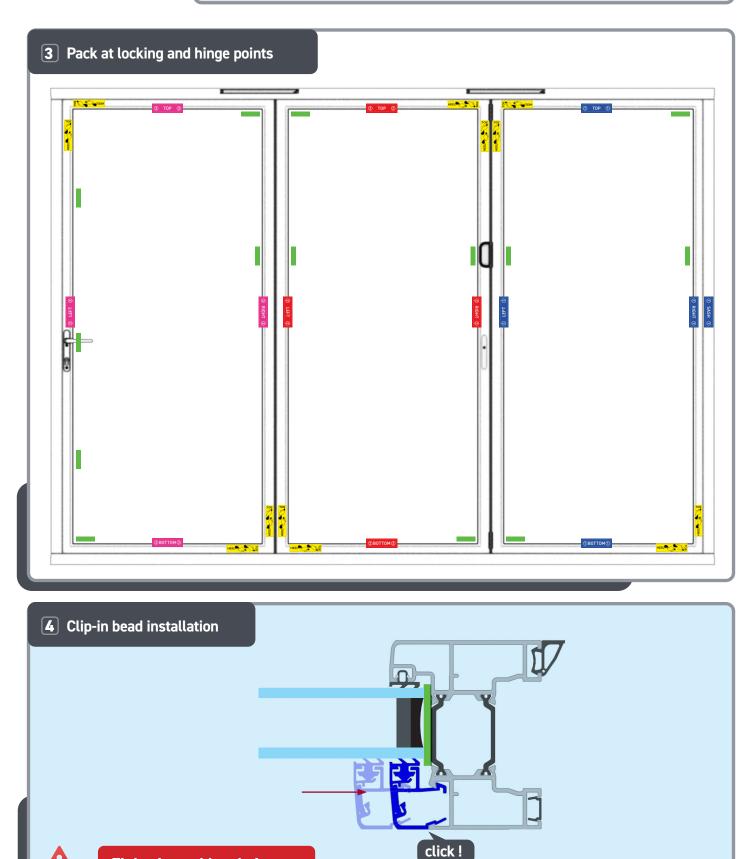

Fit horizontal beads first

DOOR MAGNET INSTALLATION




LOCK ADJUSTMENT

B1

Before adjusting lock ensure door frame and glazing is correctly packed





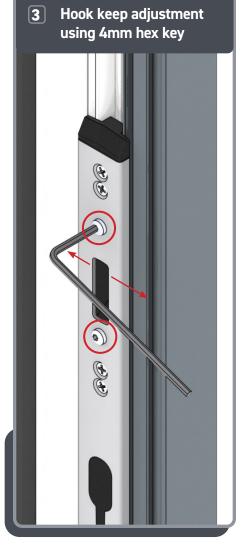

4mm hex key


KIT-FORM ONLY ASSEMBLY




KF

SUCONE


A-03310

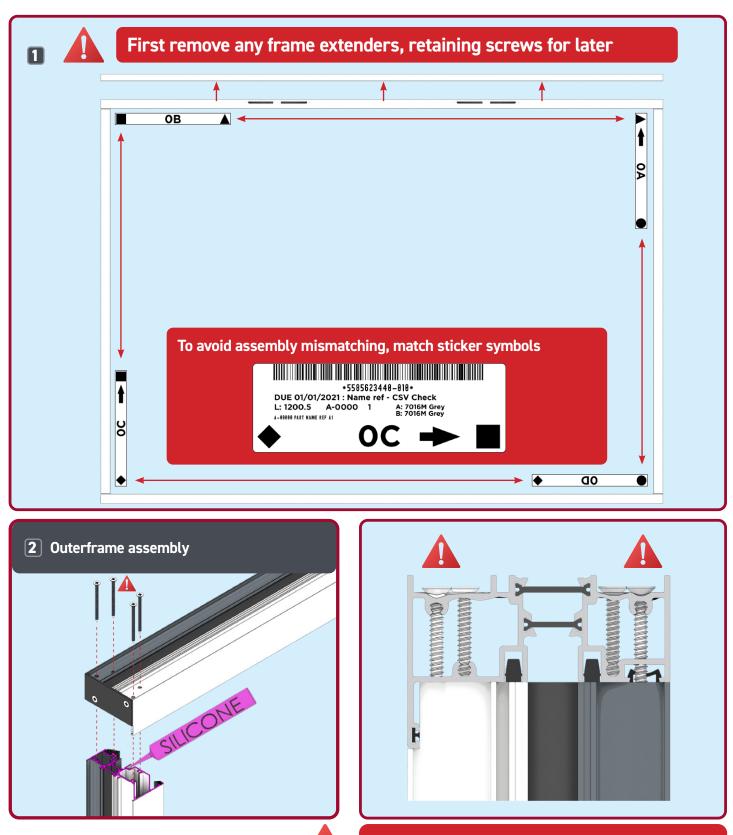

OUTERFRAME ASSEMBLY

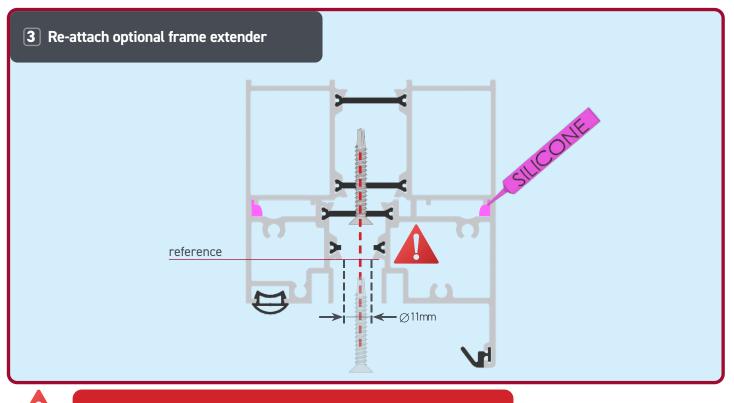


Ensure screws are sub-flush to reference line

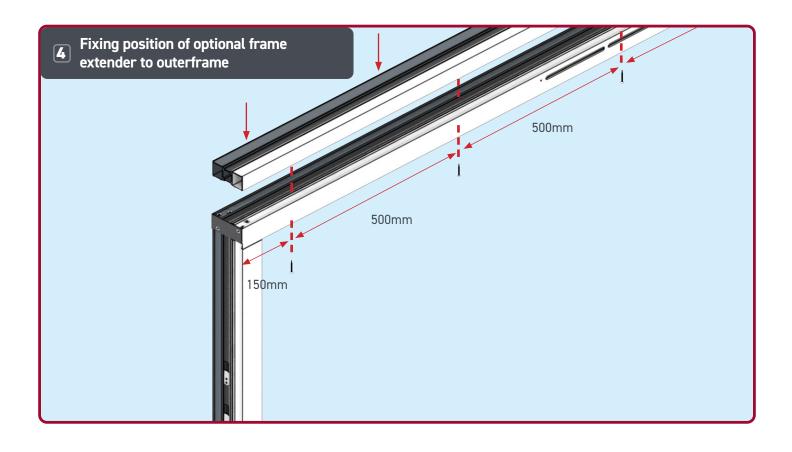

SASH INSTALLATION




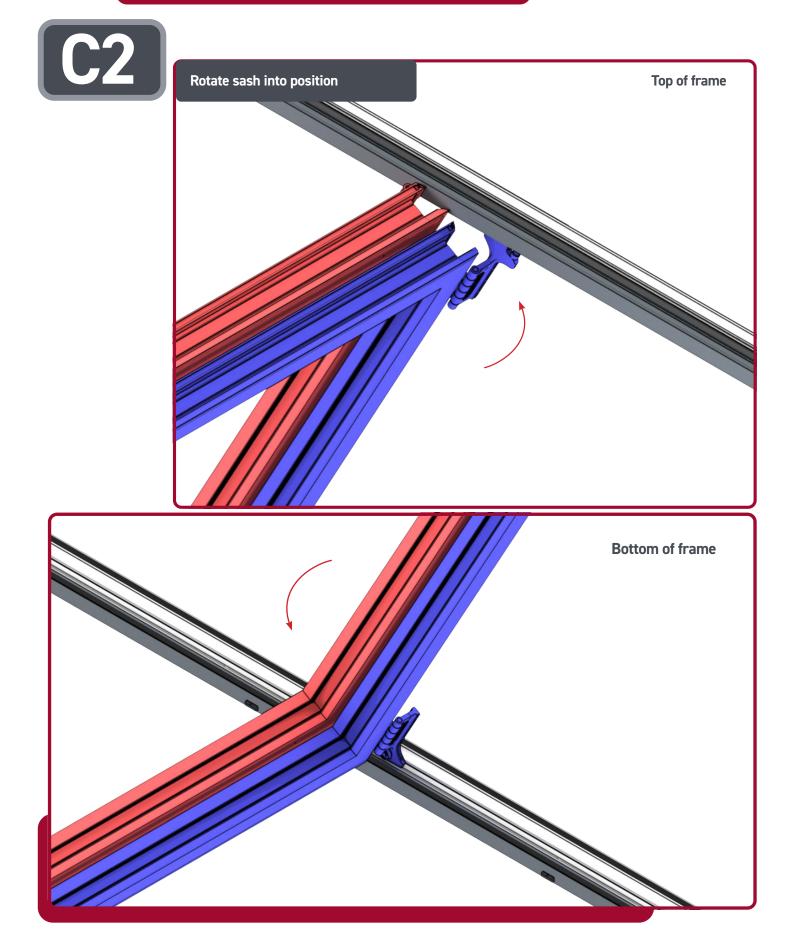

SASH INSTALLATION



KF

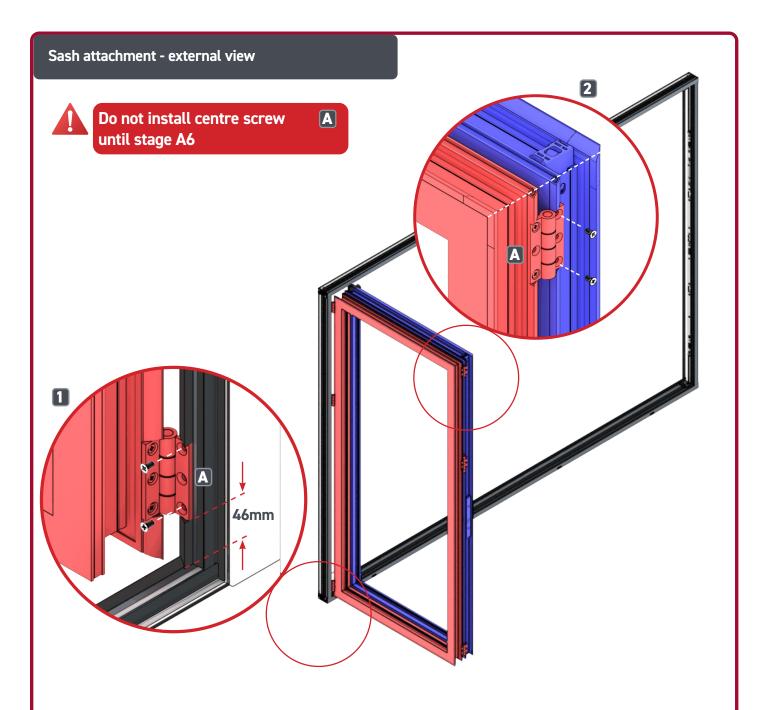



Align sashes using hinge screws to adjust heights (sashes are numbered left to right from outside)



End of Kit-form instructions

BEAD REMOVAL WHEN REGLAZING



Ensure tool and glass are clean to avoid scratches

Bead removal order E C C m -1 SASH 2

De-glazing tool A-00424

BEAD REMOVAL WHEN REGLAZING

